

Replacement Parts List

Item	Part No.	Description
1	9947-2321	Left Side Burner Table, Stainless
2	9947-6561	Cast Brass Side Burner
3	9947-1471	Side Burner Control Knob
4	9947-3271	Side Burner Electrode (Not Shown)
5	9947-1271	3 Black Control Knobs
6	9947-1591	3 Bezels
7	9947-2071	Right Side Table, Stainless
8	9947-5261	Hardware Kit - Cart (Not Shown)
9	9947-5281	Hardware Kit - Firebox (Not Shown)
10	9947-1481	Door Handles (2)
11	9947-1291	Doors (2)
12	9947-1321	Door Magnets (2)
13	9947-6481	Cast Brass Burner, Main Grill
14	9947-3761	Cooking Grates, Stainless
15	9947-1181	Burner Heat Tent™ (3)

Item	Part No.	Description
16	9947-1051	Temperature Gauge
17	9947-3071	Leg Panel Assembly, Left, Stainless
18	9947-3081	Leg Panel Assembly, Right, Stainless
19	9947-4071	Back Cart Panel, Stainless
20	9947-4511	Bottom Cart Panel, Black
21	9947-1001	Tank Base, Black
22	9947-1101	Middle Divider, Black
23	9947-1171	Top Cart Panel, Stainless
24	9947A4581	Front Caster (1)
25	9947-0461	Grease Tray
26	9947-6061	Towel Hook/Tool Hook
27	9947-1571	Back Panel, Firebox
28	9947-5431	Warming Rack
29	9947-1691	Hinges for Grill Hood
30	9947-6981	Rotisserie Pack
31	9947-3281	Electrode Box
32	9947-3301	Regulator/Hose Assembly
33	9947-4301	Igniter Switch
34	9947-5071	HVR w/Side Burner Valve
35	9947-5081	Side Burner Valve
36	9947-5091	Main Burner Electrode
37	9947-0251	Side Burner Trivet
38	9947-0471	Grease Pan
39	9947-4551	Lid Assembly, Complete

